



www.solediesel.com

Marine diesel engines

Operator's manual

MINI-62

MINI-103

U_CTMT62103_EN
Revision 1


Table of contents

Introduction	3
Table of contents.....	4
Safety precautions and instructions.....	6
Solé Diesel warranty.....	9
Section 1 – Engine information.....	12
1.1. Engine Identification	12
1.2. Engine parts identification.....	13
Section 2 – Transport, handling and storage.....	14
2.1. Reception	14
2.2. Transport and handling the packed engine	14
2.3. Transporting and handling the unpacked Engine	15
2.4. Storage of packed and unpacked engine.....	15
Section 3 - Installation.....	16
3.1. Angle of installation	16
3.2. Engine Installation	16
Section 4 - Operation.....	17
4.1. Prestart checklist	17
4.2. Cranking the engine.....	17
4.3. Stopping engine	18
4.4. Engine operation at low temperatures	18
4.5. Winterization and preservation	19
4.6. Maintenance during the storage.....	19
4.7. Restoration of operational conditions	19
Section 5 – Systems and scheduled maintenance.....	20
5.1. Safety and prevention.....	20
5.2. Periodic maintenance schedule.....	20
5.3. General	22
Maintenance task. Screw tightening, fastening.....	22
Maintenance task. Valve clearance inspection	22
Maintenance task. Compression pressure inspection	23
5.4. Lubrication system.....	24
Circuit description	24
Oil specifications.....	24
Maintenance task. Oil filter change	25
Maintenance task. Oil level check.....	25
Maintenance task. Oil fill/Change.....	26
5.5. Fuel system	26
Circuit description	26
Fuel specifications.....	26
Maintenance task. Fuel level inspection.....	27
Maintenance task. Fuel tank clean	27
Maintenance task. Water separator filter purge.....	27
Maintenance task. Fuel filter change.....	27
Maintenance task. Injection pump inspection.....	27
Maintenance task. Injector inspection	28
Maintenance task. Bleeding air from the fuel system.....	28

5.6. Cooling system	29
Coolant specifications.....	29
Maintenance task. Coolant check.....	29
Maintenance task. Coolant fill/change	30
Maintenance task. Seawater filter inspection	30
Maintenance task. Seawater pump impeller inspection.....	30
Maintenance task. Zinc anode inspection	31
5.7. Inlet and exhaust system.....	31
Exhaust circuit description.....	31
Maintenance task. Air filter inspection	32
Maintenance task. Exhaust gas, noise and vibrations inspection.....	32
5.8. Electrical system	33
Control Panel.....	33
Sensors and switches	33
Battery	34
Circuit protection.....	34
Relays	35
Maintenance task. Incandescent glow plug inspection	35
Maintenance task. Starter inspection.....	35
Maintenance task. Alternator belt tension inspection.....	35
Maintenance task. Battery level.....	36
Section 6 - Troubleshooting.....	37
Section 7 - Technical specifications	42
Section 8 – Tightening torques	45
Section 9 – Wiring diagrams	47
Section 10 – Overall dimensions	52
Section 11 – Instructions to Replace and Remove.....	55
Section 12 - Inspection prior to the delivery of propulsion engines	57
Section 13 - Maintenance log	59

2.3. Transporting and handling the unpacked Engine

When the engine is unpacked and ready for transport, use EXCLUSIVELY the appropriate lifting eyebolts.

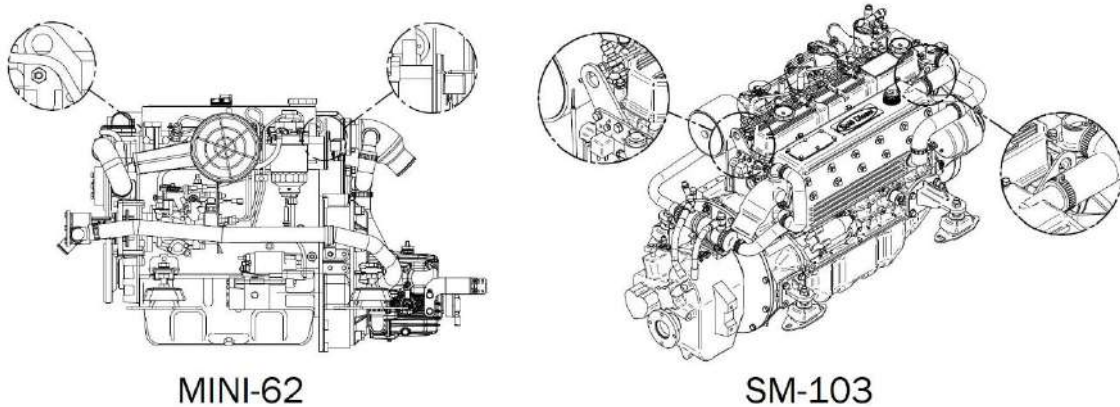

2.4. Storage of packed and unpacked engine

If the engine is left idle for prolonged periods, the client must check the possible conditions of conservation in relation to the place of storage.

If the engine is unused for prolonged periods and stored, observe all the relative technical specifications.

The treatment of the engine for storage is guaranteed for 6 months after the time of delivery.

▲ NOTICE

If the user decides to start the engine after a long time period, this must be done in the presence of an authorized technician.