



www.solediesel.com

Marine diesel engines

Operator's manual

MINI-62G

MINI-74

SM-82

SM-94

SM-105L

Table of contents

Introduction	3
Safety precautions and instructions.....	6
Solé Diesel warranty.....	10
Section 1 – Engine information.....	13
1.1. Engine Identification	13
1.2. Engine parts identification.....	14
Section 2 – Transport, handling and storage	15
2.1. Reception	15
2.2. Transport and handling the packed engine	15
2.3. Transporting and handling the unpacked Engine	16
2.4. Storage of packed and unpacked engine.....	16
Section 3 - Installation.....	17
3.1. Angle of installation	17
3.2. Engine Installation	17
Section 4 - Operation.....	18
4.1. Prestart checklist	18
4.2. Cranking the engine.....	18
4.3. Stopping engine	19
4.4. Engine operation at low temperatures	19
4.5. Winterization and preservation	20
4.6. Maintenance during the storage.....	21
4.7. Restoration of operational conditions	21
Section 5 – Systems and scheduled maintenance	22
5.1. Safety and prevention.....	22
5.2. Periodic maintenance schedule.....	22
5.3. General	24
Maintenance task. Screw tightening, fastening.....	24
Maintenance task. Valve clearance inspection.....	24
Maintenance task. Compression pressure inspection.....	25
5.4. Lubrication system.....	26
Circuit description	26
Oil specifications.....	26
Maintenance task. Oil filter change.....	26
Maintenance task. Oil level check	27
Maintenance task. Oil fill/Change.....	28
5.5. Fuel system	28
Circuit description	28
Fuel specifications.....	28
Maintenance task. Fuel level inspection	29
Maintenance task. Fuel tank clean.....	29
Maintenance task. Water separator filter purge	29
Maintenance task. Fuel filter change	29
Maintenance task. Injection pump inspection	29
Maintenance task. Injector inspection.....	30
Maintenance task. Bleeding air from the fuel system	31
5.6. Cooling system	31

Table of contents



<i>Coolant specifications</i>	32
<i>Maintenance task. Coolant check</i>	32
<i>Maintenance task. Coolant fill/change</i>	32
<i>Maintenance task. Seawater filter inspection</i>	32
<i>Maintenance task. Seawater pump impeller inspection</i>	33
<i>Maintenance task. Zinc anode inspection</i>	33
5.7. Inlet and exhaust system	34
<i>Exhaust circuit description</i>	34
<i>Maintenance task. Air filter inspection</i>	35
<i>Maintenance task. Exhaust gas, noise and vibrations inspection</i>	35
5.8. Electrical system	36
<i>Control Panel</i>	36
<i>Battery</i>	36
<i>Circuit protection</i>	36
<i>Relays</i>	36
<i>Maintenance task. Incandescent glow plug inspection</i>	37
<i>Maintenance task. Starter motor inspection</i>	37
<i>Maintenance task. Alternator belt tension inspection</i>	37
<i>Maintenance task. Battery level</i>	38
Section 6 - Troubleshooting	39
Section 7 - Technical specifications	44
Section 8 – Tightening torques	48
Section 9 – Wiring diagrams	50
Section 10 – Overall dimensions	53
Section 11 – Instructions to Replace and Remove	59
Section 12 - Inspection prior to the delivery of propulsion engines	61
Section 13 – Declaration of conformity for recreational Craft Propulsion Engines	63
Maintenance log	68


Section 1 – Engine information

1.1. Engine Identification

Identification label:

The nameplate is located above the rocker cover.

<i>Solé Diesel</i>		MADE IN SPAIN
TIPO TYPE	MINI -	
MOTOR N° ENG No.		
kW	R.P.M.	

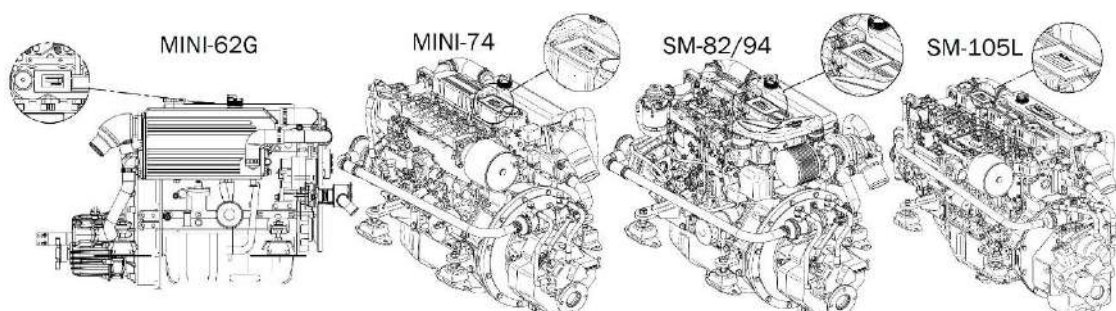

Engine serial number:

In addition, all engines are marked with the serial number on the block.

