




OPERATORS MANUAL

35B Three, 38B Four, 42B Four

MARINE DIESEL ENGINES

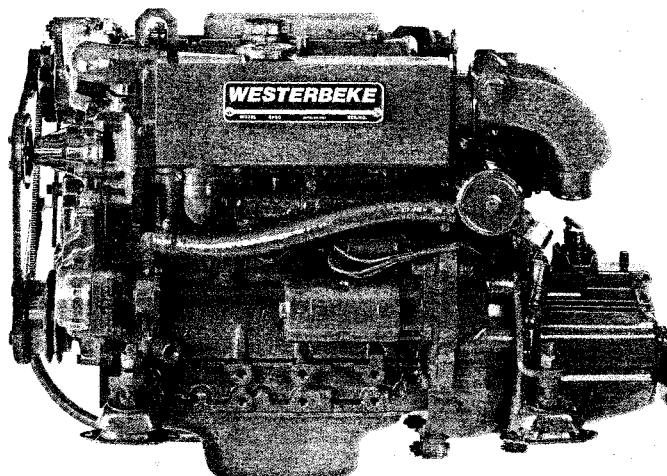

PUBLICATION NO. 037435
REVISION. 3
MARCH 2018



WESTERBEKE CORPORATION • 150 JOHN HANCOCK ROAD
MYLES STANDISH INDUSTRIAL PARK • TAUNTON MA 02780
WEB SITE: WWW.WESTERBEKE.COM




Member National Marine Manufacturers Association

TABLE OF CONTENTS


Introduction	2	Engine Lubricating	22
Warranty Procedures.....	2	Changing the Oil Filter.....	22
Serial Number Locations.....	3	Changing the Oil	22
Ordering Parts.....	3	Oil Pressure	23
Parts Identification	4	Testing Oil Pressure.....	23
Transmission Data	5	Remote Oil Filter (Optional)	24
Propeller Recommendations.....	5	Torque Specifications	24
Fuel, Engine Oil and Coolant	6	Tachometer	25
Oil Pressure	6	Water Heater	26
Coolant Recovery Tank	6	Starter Motor	27
Preparations for Initial Start-Up	7	DC Electrical System	29
Admiral Control Panel	8	Alternator Troubleshooting	29
Captain Control Panel	9	Battery Care.....	30
Starting/Stopping Procedure	10	Wiring Schematic	31
Engine Break-In Procedure	11	Wiring Diagram	31
The Daily Operation	12	Engine Troubleshooting	32
Warning Lights, Alarms and Circuit Breaker	13	Coolant Temperature/Oil Pressure Gauges .	34
Maintenance Schedule (Chart)	14	Adjusting Idle Speed	35
Cooling System	16	Belt Tension and Maintenance.....	35
Changing Coolant.....	16	Torquing Cylinder Head Bolts (35B)	36
Thermostat	17	Valve Clearance (35B)	36
Raw Water Intake Strainer	18	Torquing Cylinder Head Bolts (38B/42B) ...	37
Raw Water Cooling Circuit	18	Valve Clearance (38B/42B).....	37
Heat Exchanger	18	HBW-ZF Transmissions	38
Raw Water Pump.....	18	HBW-ZF Transmission (Chart)	41
Zinc Anode	19	JS and BW Transmissions	42
Air Intake/Silencer.....	19	Borg Warner Transmission	44
Fuel System	20	Oil Coolers.....	46
Fuel/Water Separator	20	Metric Conversion/Hardware (Chart)	47
Fuel Filters.....	20	Specifications	48
Fuel Lift Pumps	20	W35B Three	48
Fuel Injectors	21	W38B Four	50
Fuel Injection Pump	21	W42B Four	52
Glow Plugs	21	Lay-Up and Recommissioning	54
		Suggested Spare Parts	56

PARTS IDENTIFICATION

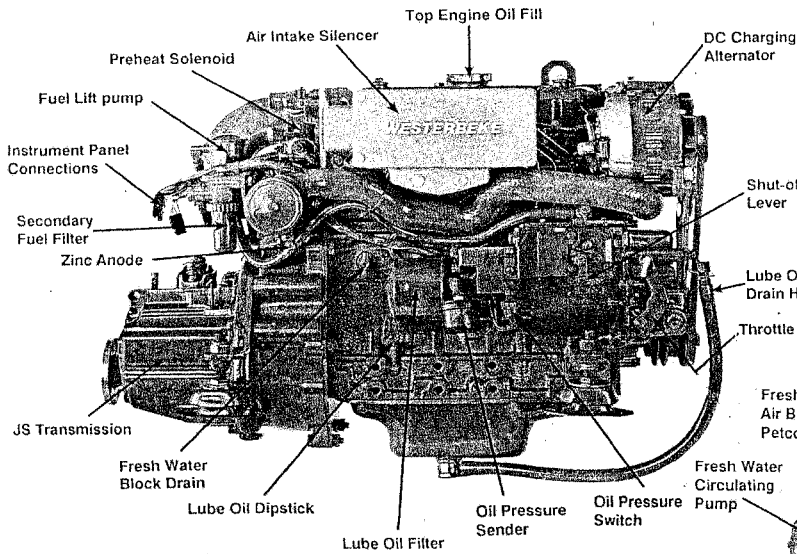


RIGHT SIDE

LEFT SIDE.

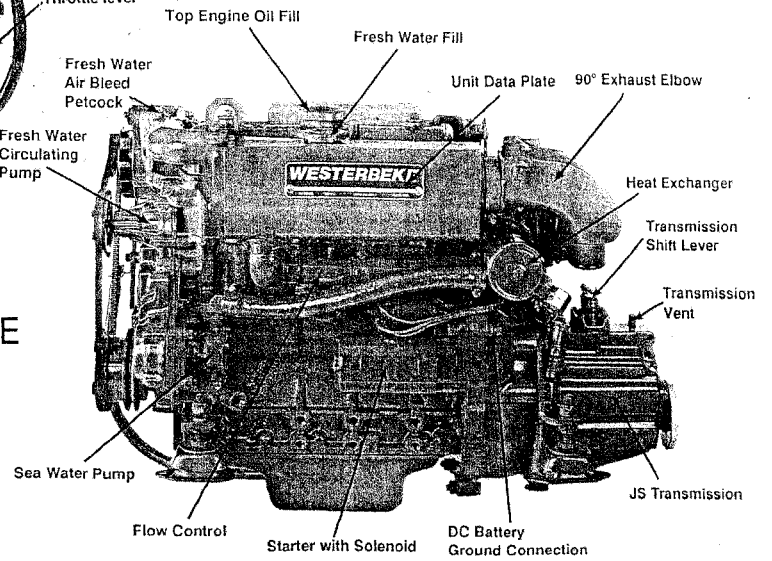


W 42B FOUR MARINE DIESEL ENGINE

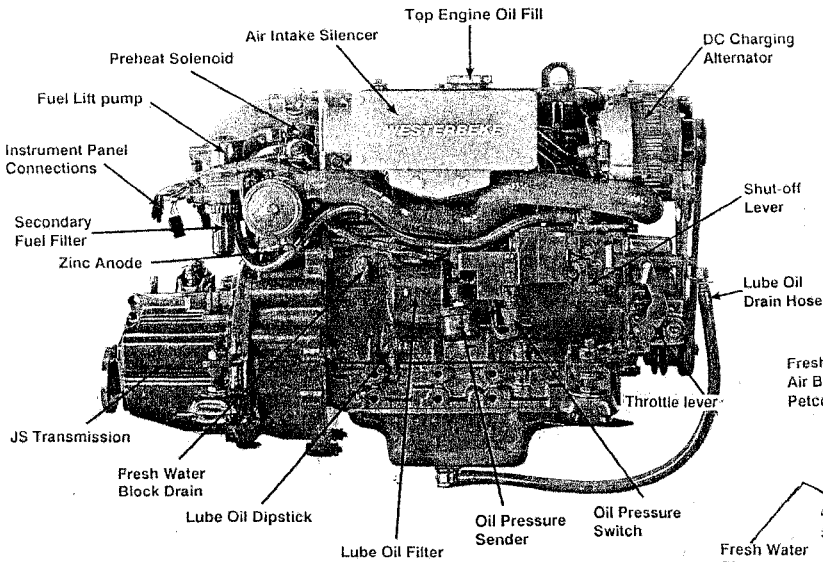

RIGHT SIDE

LEFT SIDE

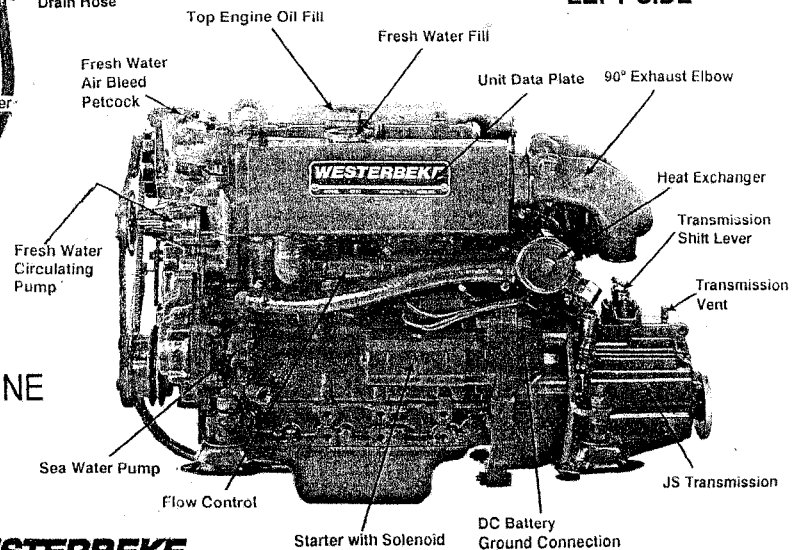

W 38B FOUR MARINE DIESEL ENGINE