

YANMAR

SERVICE MANUAL

MARINE DIESEL ENGINE

MODELS

1GM10(C)
2GM20(F)(C)
3GM30(F)(C)
3HM35(F)(C)

Models

1GM10(C) 2GM20(F)(C) 3GM30(F)(C) 3HM35(F)(C)

A. Engine Model Name	0-1	CHAPTER 7 DIRECT SEA-WATER COOLING SYSTEM	
B. Engine Model Name Plate and Clutch Model Name Plate	0-1	1. Cooling System	7-1
C. Cylinder Number	0-3	2. Water Pump	7-5
		3. Thermostat	7-11
		4. Anticorrosion Zink	7-14
		5. Kingston Cock (Option)	7-16
		6. Bilge Pump and Bilge Strainer (Option)	7-17
CHAPTER 0 FOR SAFETY		CHAPTER 8 FRESH WATER COOLING SYSTEM	
1. For safe servicing	0-4	1. Cooling System	8-1
2. Precaution for safe servicing	0-5	2. Sea Water Pump	8-3
		3. Fresh Water Pump	8-4
CHAPTER 1 GENERAL		4. Heat Exchanger	8-7
1. Specifications	1-1	5. Filler Cap and Subtank	8-11
2. Principal Construction	1-4	6. Thermostat	8-13
3. Performance Curves	1-5	7. Cooling Water Temperature Switch	8-16
4. Features	1-9	8. Precautions	8-17
5. Engine Cross Sections	1-10		
6. Dimensions	1-17	CHAPTER 9 MODIFYING THE COOLING SYSTEM	
7. Piping Diagrams	1-24	1. General	9-1
		2. Disassembly of Sea Water-Cooled Engine	9-2
CHAPTER 2 BASIC ENGINE		3. Assembling modified parts to the Fresh Water-Cooled Engine	9-7
1. Cylinder Block	2-1	4. Cautions When the Engine is Installed Inboard	9-12
2. Cylinder Head	2-9		
3. Piston	2-28	CHAPTER 10 REDUCTION AND REVERSING GEAR	
4. Connecting Rod	2-34	[A] For Engine Models 1GM10, 2GM20(F) and 3GM30(F)	
5. Crankshaft	2-38	1. Construction	10-1
6. Flywheel and Housing	2-49	2. Shifting Device	10-7
7. Camshaft	2-53	3. Inspection and Servicing	10-14
8. Timing Gear	2-59	4. Disassembly	10-19
		5. Reassembly	10-24
CHAPTER 3 FUEL SYSTEM		[B] For Model 3GM35(F)	
1. Fuel injection System	3-1	1. Construction	10-29
2. Injection Pump	3-3	2. Installation	10-33
3. Injection Nozzle	3-25	3. Operation and Maintenance	10-34
4. Fuel Filter	3-29	4. Inspection and Servicing	10-35
5. Fuel Feed Pump	3-30	5. Disassembly	10-40
6. Fuel Tank (Option)	3-33	6. Reassembly	10-44
		[C] Marine Gear Models KM2P, KM3P and KM3V for Engine Models 1GM10, 2GM20(F) and 3GM30(F)	
CHAPTER 4 GOVERNOR		1. Construction	10-50
1. Governor	4-1	2. Shifting Device	10-56
2. Injection Limiter	4-9	3. Inspection and Servicing	10-61
3. No-Load Maximum Speed Limiter	4-11	4. Disassembly	10-68
4. Idling Adjuster	4-12	5. Reassembly	10-73
5. Engine Stop Lever	4-13		
		[D] V-drive Gear, Model KM3V	
CHAPTER 5 INTAKE AND EXHAUST SYSTEM		1. Construction	10-77
1. Intake and Exhaust System	5-1	2. Specifications	10-80
2. Intake Silencer	5-3	3. Power Transmission System	10-81
3. Exhaust System	5-4	4. Cooling System (Sea-water Cooling Engine)	10-82
4. Breather	5-6	5. Piping Diagrams	10-85
		6. Inspection and Servicing	10-90
CHAPTER 6 LUBRICATION SYSTEM		7. Shim Adjustment for V-drive Gear Shaft. and Backlash Adjustment for V-drive Gear Shaft and DriveGear	10-92
1. Lubrication System	6-1	8. Disassembly	10-94
2. Oil Pump	6-5	9. Reassembly	10-97
3. Oil Filter	6-9		
4. Oil Pressure Regulator Valve	6-12		
5. Oil Pressure Measurement	6-14		

7. Piping Diagrams

7-1 1GM10

