


A0A1029-0104

SERVICE MANUAL

MARINE DIESEL ENGINE

4JH2E,4JH2-TE,
4JH2-HTE,4JH2-DTE

2001.4

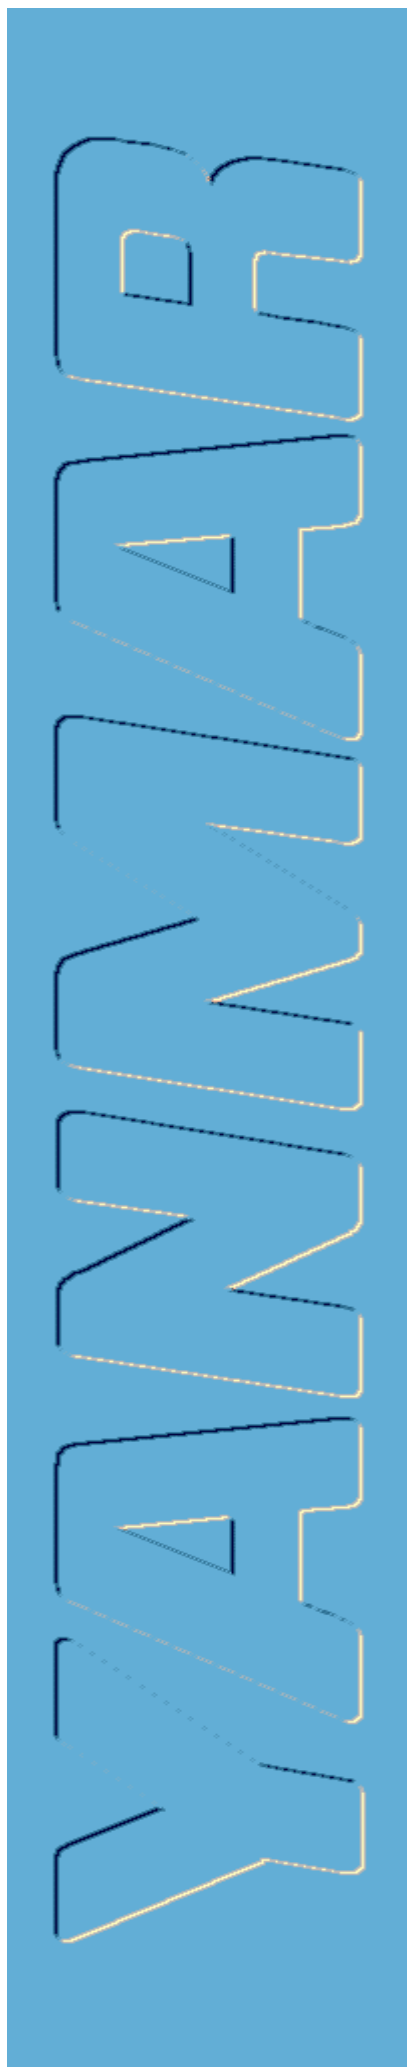

MODELS

4JH2E 4JH2-TE

CHAPTER 1 GENERAL

1. Exterior Views	1-1
2. Specifications	1-4
3. Construction	1-6
4. Performance Curves	1-7
5. Engine Cross Section	1-11
6. Dimensions	1-12
7. Piping Diagrams	1-21

CHAPTER 2 BASIC ENGINE PARTS

1. Cylinder Block	2-1
2. Cylinder Liners	2-4
3. Cylinder Head	2-6
4. Piston and Piston Pins	2-13
5. Connecting Rod	2-17
6. Crankshaft and Main Bearing	2-20
7. Camshaft and Tappets	2-23
8. Timing Gear	2-26
9. Flywheel and Housing	2-28

CHAPTER 3 FUEL INJECTION EQUIPMENT

1. Fuel Injection Pump Service Data	3-1
2. Governor	3-2
3. Disassembly, Reassembly and Inspection of Fuel Injection Pump	3-13
4. Adjustment of Fuel Injection Pump and Governor	3-23
5. Fuel Feed Pump	3-29
6. Fuel Injection Nozzle	3-31
7. Troubleshooting	3-35
8. Tools	3-37
9. Fuel Filter	3-39
10. Fuel Tank (Optional)	3-40

CHAPTER 4 INTAKE AND EXHAUST SYSTEM

1. Intake and Exhaust System	4-1
2. Turbocharger	4-4
3. Mixing Elbow	4-18

CHAPTER 5 LUBRICATION SYSTEM

1. Lubrication System	5-1
2. Lube Oil Pump	5-3
3. Lube Oil Filter	5-6
4. Oil Pressure Control Valve	5-8
5. Lube Oil Cooler	5-9
6. Piston Cooling Nozzle	5-11
7. Rotary Waste Oil Pump (Optional)	5-12

CHAPTER 6 COOLING WATER SYSTEM

1. Cooling Water System	6-1
2. Sea Water Pump	6-4
3. Fresh Water Pump	6-7
4. Heat Exchanger	6-10
5. Pressure Cap and Sub Tank	6-12
6. Thermostat	6-14
7. Kingston Cock (Optional)	6-16
8. Sea Water Filter (Optional)	6-17
9. Bilge Pump and Bilge Strainer (Optional)	6-18

CHAPTER 7 REDUCTION AND REVERSING GEAR

Marine gear model KBW 20 and 21

1. Construction	7-1
2. Installation	7-6
3. Operation and Maintenance	7-7
4. Inspection and Servicing	7-8
5. Disassembly	7-13
6. Reassembly	7-17
7. Special Tools	7-23

Marine gear model KM4A, (Angle drive)

1. Construction	7-24
2. Shifting Device	7-28
3. Inspection and Servicing	7-33
4. Special Tools	7-43
5. Disassembly	7-45
6. Reassembly	7-53

Marine gear model KM3P2

1. Construction	7-62
2. Shifting Device	7-68
3. Inspection and Servicing	7-73
4. Disassembly	7-80
5. Reassembly	7-85

CHAPTER 8 REMOTE CONTROL

1. Remote Control System	8-1
2. Remote Control Installation	8-2
3. Remote Control Inspection	8-5
4. Remote Control Adjustment	8-6

CHAPTER 9 ELECTRICAL SYSTEM

1. Electrical System	9-1
2. Battery	9-7
3. Starter Motor	9-10
4. Alternator	9-26
5. Instrument Panel and Wiring Codes	9-36
6. Warning Devices	9-39
7. Air Heater (Optional)	9-42
8. Electric Type Engine Stop Device (Optional)	9-43
9. Tachometer	9-45
10. Alternator 12V/80A (Optional)	9-48

CHAPTER 10 DISASSEMBLY AND REASSEMBLY

1. Disassembly and Reassembly Precautions	10-1
2. Disassembly and Reassembly Tools	10-2
3. Disassembly and Reassembly	10-9
4. Bolt/nut Tightening Torque	10-32
5. Test Running	10-33

Ref. 4JH/4JH2E PARTS DEFERING

1. Exterior Views

1-1 4JH2E

