USERS HANDBOOK

4.108 Diesel Engine

Publication 201 TPD 0389 1218
© All rights reserved
March 1989
Perkins Engines Ltd.,
Peterborough, England.

This document has been printed from SPI². Not for Resale

Contents

General information 4
Introduction 4
Safety precautions 5
CARECARD 6
Engine identification 7
Perkins companies 8

Engine views 9

Engine data 11

Instructions for operation 12
To start the engine 12
To stop the engine 14
Engine speed adjustment 14
Running-in procedure 14
Altitude 14

Engine fluids 15
Fuel specification 15
Lubricating oil specification 15
Coolant specification 16
To drain the cooling system 17

Preventive maintenance 18
Schedules 18

Post delivery service 19

Instructions for maintenance 20
To check the cylinder head nut tension ... 20
Air filter 21
Air cleaner 21
Restriction indicator 21
To renew the lubricating oil filter canister ... 22
To check the drive belt 23
To check the valve tip clearance 24
To renew the fuel filter element 25
To remove air from the fuel system 26
Atomiser fault 29
To renew an atomiser 29

Protection of an engine not in service 30

Fault diagnosis 32

POWERPART consumable products 34

Examples of service assistance 35

Parts illustrations 36
Parts descriptions 47

Latest information 49

This document has been printed from SPI². Not for Resale

13 Front lift bracket
14 Induction manifold
15 Alternator
16 Lubricating oil dipstick
17 Breather pipe
18 Lubricating oil sump
19 Cylinder block drain plug
20 Fuel lift pump
21 Thermostart
22 Rear lift bracket
23 Rocker cover
24 Atomiser

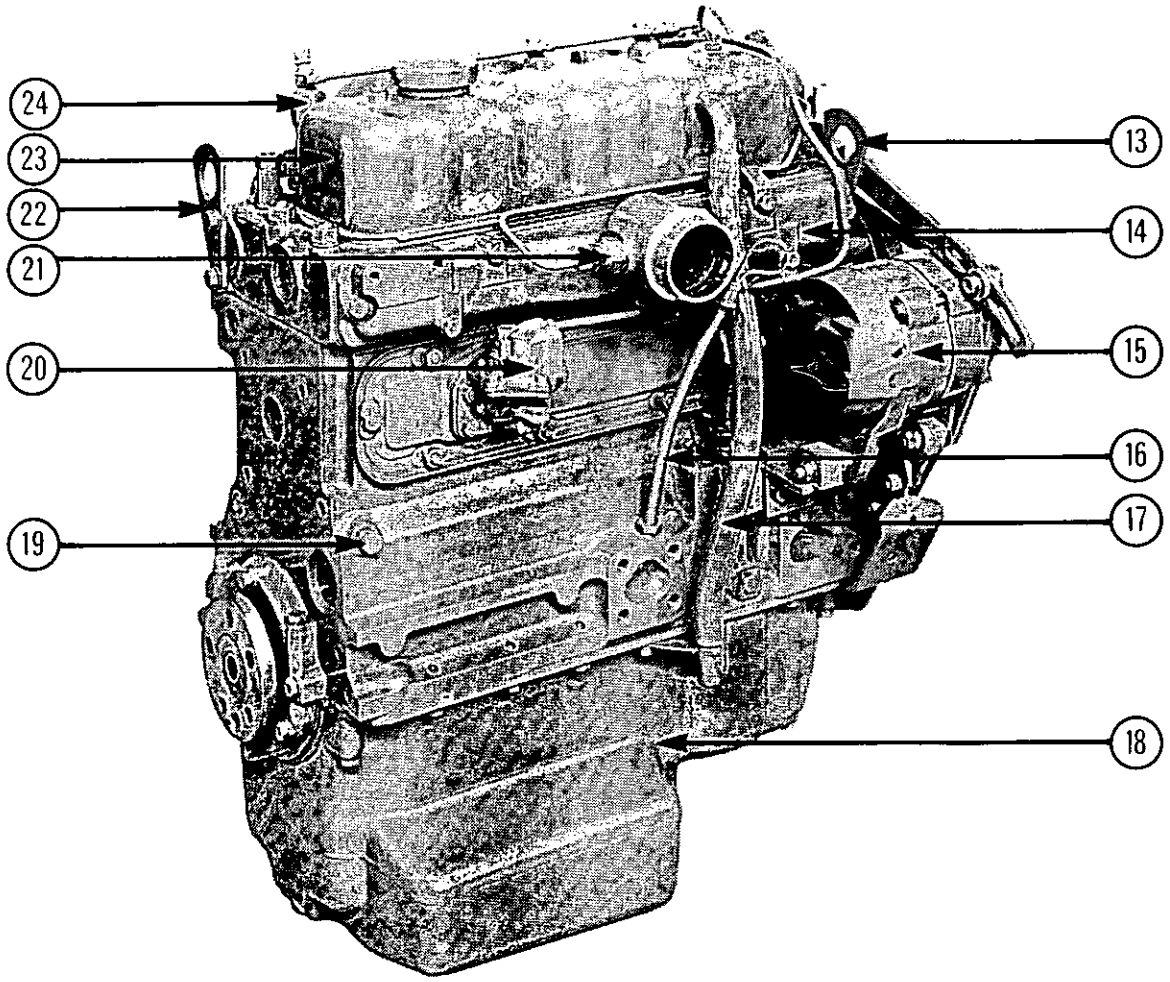


Fig. 4 Rear/right side of 4.108 engine

This document has be[redacted] SPI² Not for Resale