Workshop manual

Group 30

A
2(0)

D1-13 B • D1-20 B
D1-30 B • D2-40 B
D2-55 D • D2-55 E
D2-75 B • D2-75 C

https://www.boat-manuals.com/

Group 30 Electrical system

Marine Diesel engines

D1-13 B • D1-20 B
D1-30 B • D2-40 B
D2-55 D • D2-55 E
D2-75 B • D2-75 C

Contents


Safety information 2
Introduction 2
Important 2
General information 5
About this Workshop Manual 5
Spare parts 5
Certified engines 5
Repair instructions 6
Our common responsibility 6
Torque 6
Special tools 7
The MDI system 8
Component location 9
Component description 11
MDI 11
Switch, oil pressure, engine 11
Sensor, coolant temperature 11
Sensor, engine speed (flywheel) 11
Stop solenoid 12
Glow plugs 12
Starter motor 12
Alternator 13
Repair instructions 14
General advice 14
Fault tracing of cables and connectors 14
Starter motor 15
Checking battery voltage 15
Checking alternator brushes 16
Checking the charging system 18
Checking the instruments 19
Malfunctions 20
Oil pressure (engine) warning 21
Check MDI output for oil pressure switch 22
Coolant temperature warning 23
Check MDI output for coolant temperature sensor 25
Check coolant temperature sensor 26
Multilink fault 27
Check speed sensor, flywheel 29
Check NMEA 2000 Gateway LED 30
Fuel level warning 31
Check fuel level sensor 32
Button panel fault 33
Check button panel 34
Stop solenoid fault 35
Check stop solenoid 36
Start / preheat warning 37
Battery warning 40
Check altenator excitation voltage 41
Wiring diagram 42
Pin configuration, MDI 43
Technical data 44
Electrical system 44
Alternator 44
Starter motor 44

© 2007 AB VOLVO PENTA
We reserve the right to make modifications without prior notice.
Printed on environmentally compatible paper.


https://www.boat-manuals.com/

Component location


Basic instrumentation

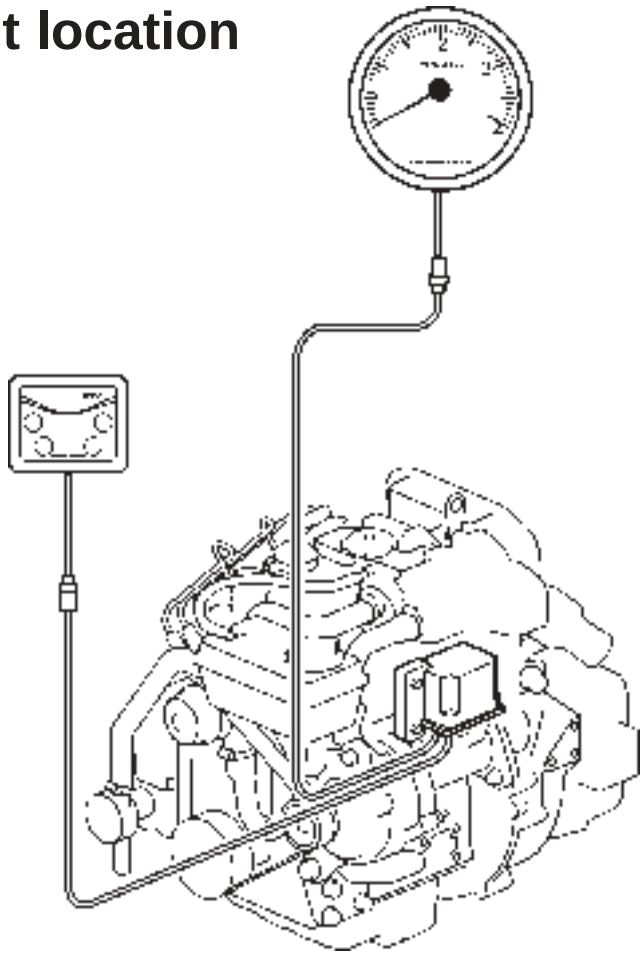

De luxe instrumentation

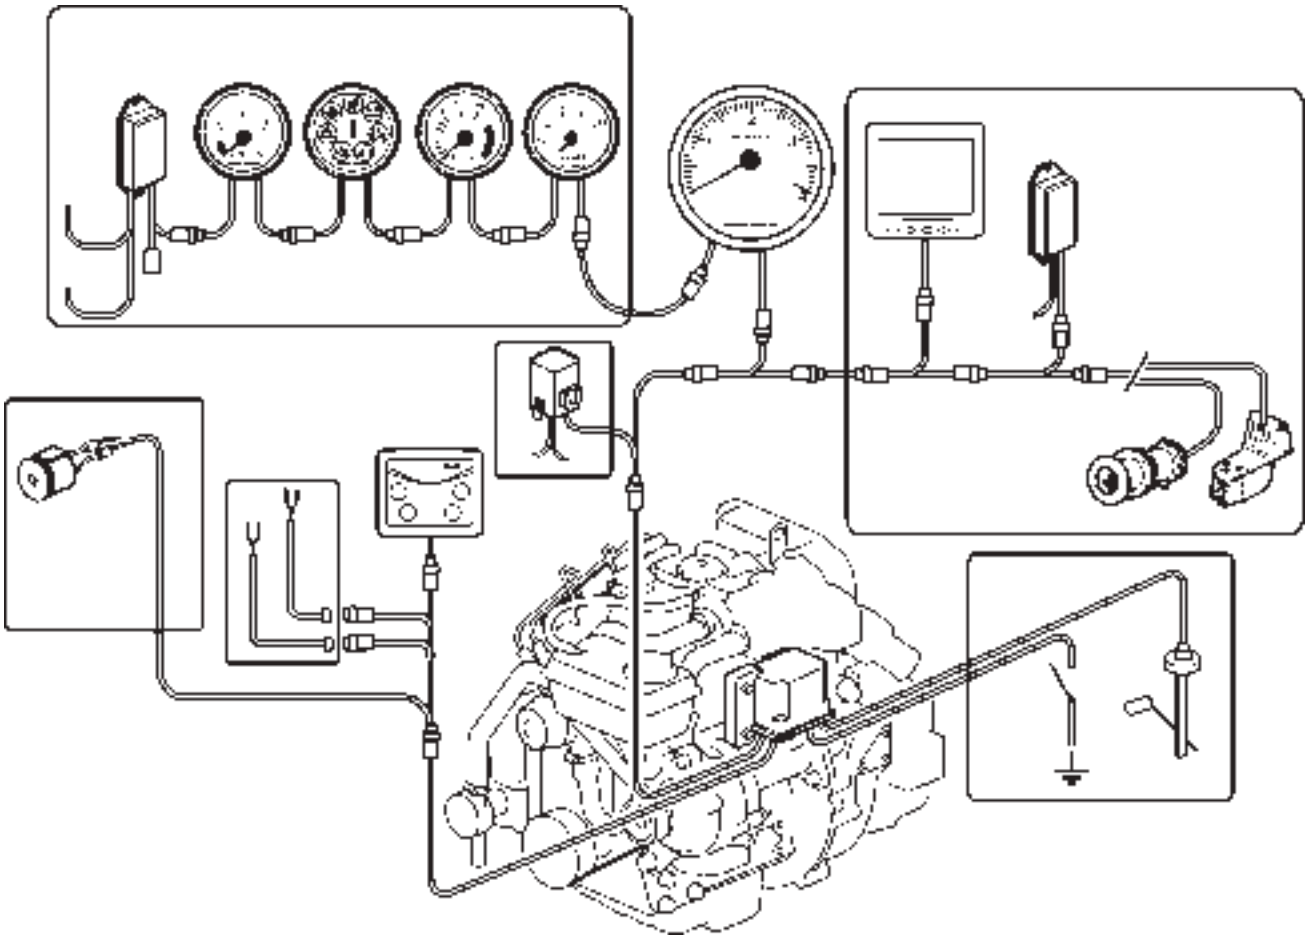

https://www.boat-manuals.com/

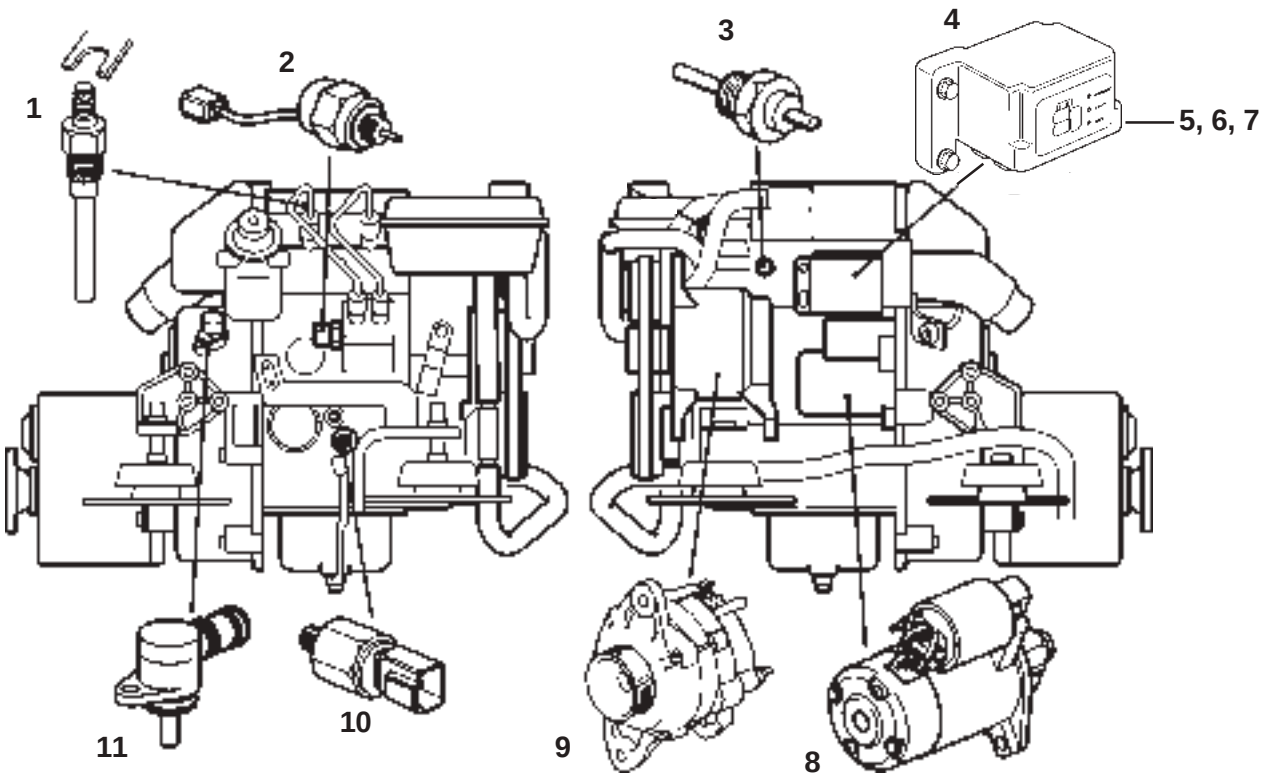

NOTE! The engine on these pictures is a D1-13 but the component location is the same on D1-20, D1-30, D2-40, D2-55, D2-75.

1. Glow plugs
2. Stop solenoid
3. Coolant temperature sensor
4. MDI
5. Starter relay
6. Glowplug relay
7. Charge sensing resistor
8. Starter motor
9. Alternator
10. Oil pressure switch
11. Engine speed sensor

https://www.boat-manuals.com/