YANMAR
SERVICE MANUAL

MARINE DIESEL ENGINE

MODEL **2QM15**

Model 2QM15

CHAPTER 1 GENERAL
1. Exterior Views 1-1
2. Specifications 1-2
3. Principal Construction 1-3
4. Performance Curves 1-4
5. Features 1-5
6. Sectional Views 1-6
7. Exterior Views 1-7
8. System Diagrams 1-8
9. Standard Accessories 1-15
10. Optional Accessories 1-16

CHAPTER 2 BASIC ENGINE
1. Cylinder Block 2-1
2. Cylinder Liner 2-2
3. Cylinder Head 2-5
4. Piston 2-15
5. Connecting Rod 2-19
6. Crankshaft 2-22
7. Camshaft 2-26
8. Timing Gear 2-29

CHAPTER 3 FUEL SYSTEM
1. Construction 3-1
2. Injection Pump 3-2
3. Injection Nozzle 3-11
4. Fuel Filter 3-14
5. Fuel feed pump 3-15
6. Fuel Tank 3-16

CHAPTER 4 GOVERNOR
1. Governor 4-1
2. Injection Limiter 4-6
3. No-Load Maximum Speed Limiter 4-7
4. Engine Stop Spring 4-8

CHAPTER 5 INTAKE AND EXHAUST SYSTEMS
1. Intake and Exhaust Systems 5-1
2. Intake Silencer 5-2
3. Exhaust System 5-3
4. Breather Pipe 5-4

CHAPTER 6 LUBRICATION SYSTEM
1. Lubrication System 6-1
2. Oil Pump 6-3
3. Oil Filter 6-5
4. Oil Pressure Regulator Valve 6-6
5. Oil Pressure Measurement 6-7

CHAPTER 7 COOLING SYSTEM
1. Cooling System 7-1
2. Water Pump 7-3
3. Thermostat 7-7
4. Anticorrosion Zinc 7-8
5. Kingston Cock 7-9
6. Bilge Strainer 7-10

CHAPTER 8 REDUCTION AND REVERSING GEAR
1. Construction 8-1
2. Installation 8-5
3. Operation and Maintenance 8-6
4. Inspection and Servicing 8-7
5. Disassembly 8-12
6. Reassembly 8-16

CHAPTER 9 REMOTE CONTROL SYSTEM
1. Construction 9-1
2. Clutch Regulator One-handle Remote Control 9-2
3. Decompression Remote Control 9-4
4. Engine Stop Remote Control 9-5

CHAPTER 10 ELECTRICAL SYSTEM
1. Composition 10-1
2. Battery 10-3
3. Starter Motor 10-6
4. Alternator 10-13
5. Alarm Circuit 10-23

CHAPTER 11 INSTALLATION AND FITTING OUT
1. Propeller Selection 11-1
2. Engine Installation 11-2
3. Stern Equipment 11-6
4. Interior Piping and Wiring 11-10
5. Front Power Take-Off 11-15


CHAPTER 12 OPERATING INSTRUCTIONS
1. Fuel Oil And Labricating Oil 12-1
2. Engine Operating Instructions 12-8
3. Troubleshooting And Repair 12-12

CHAPTER 13 DISASSEMBLY AND REASSEMBLY
1. Disassembly And Reassembly Precautions 13-1
2. Disassembly And Reassembly Tools 13-2
3. Other 13-6
4. Disassembly 13-7
5. Reassembly 13-15
6. Tightening Torque 13-24
7. Packing Supplement and Adhesines 13-26


CHAPTER 14 INSPECTION AND SERVICING
1. Periodic Inspection and Servicing 14-1

1. Exterior Views

1-1 Intake side viewed from stern

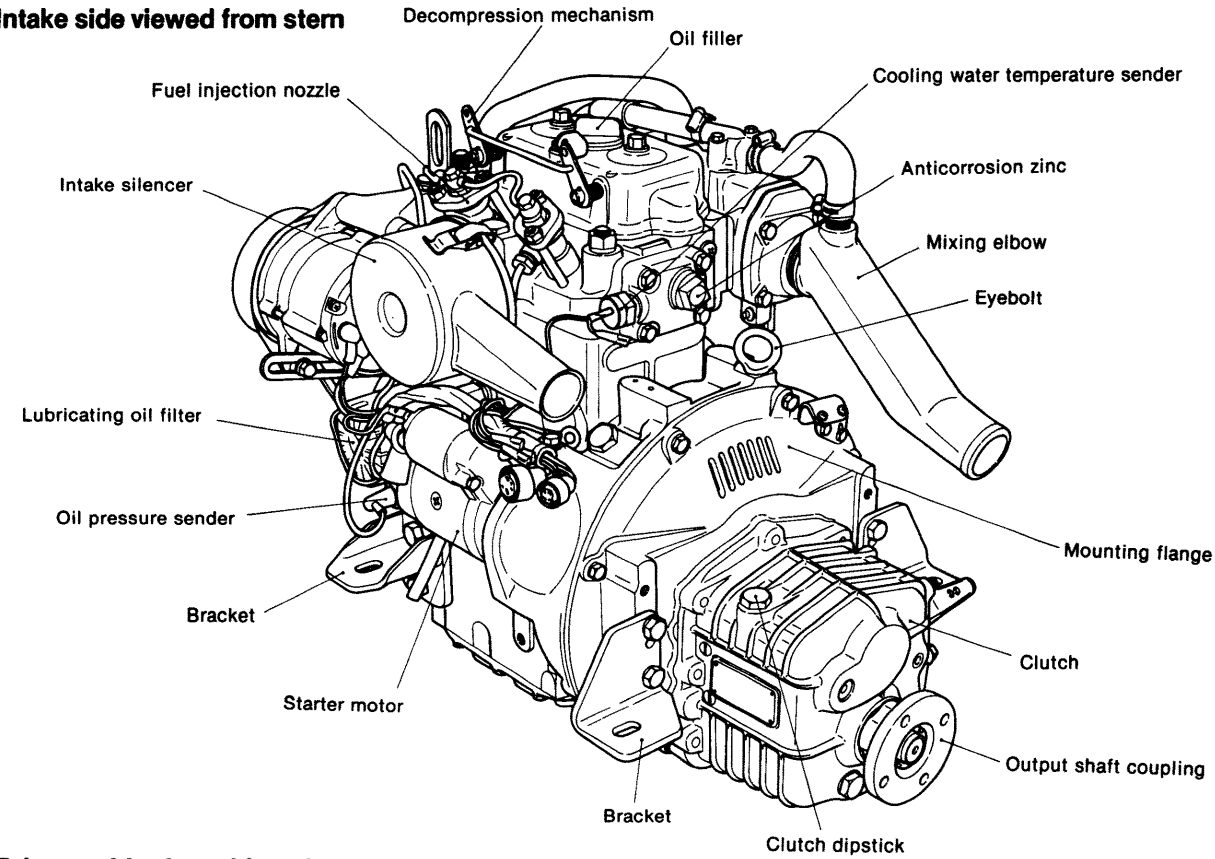

1-2 Exhaust side viewed from bow

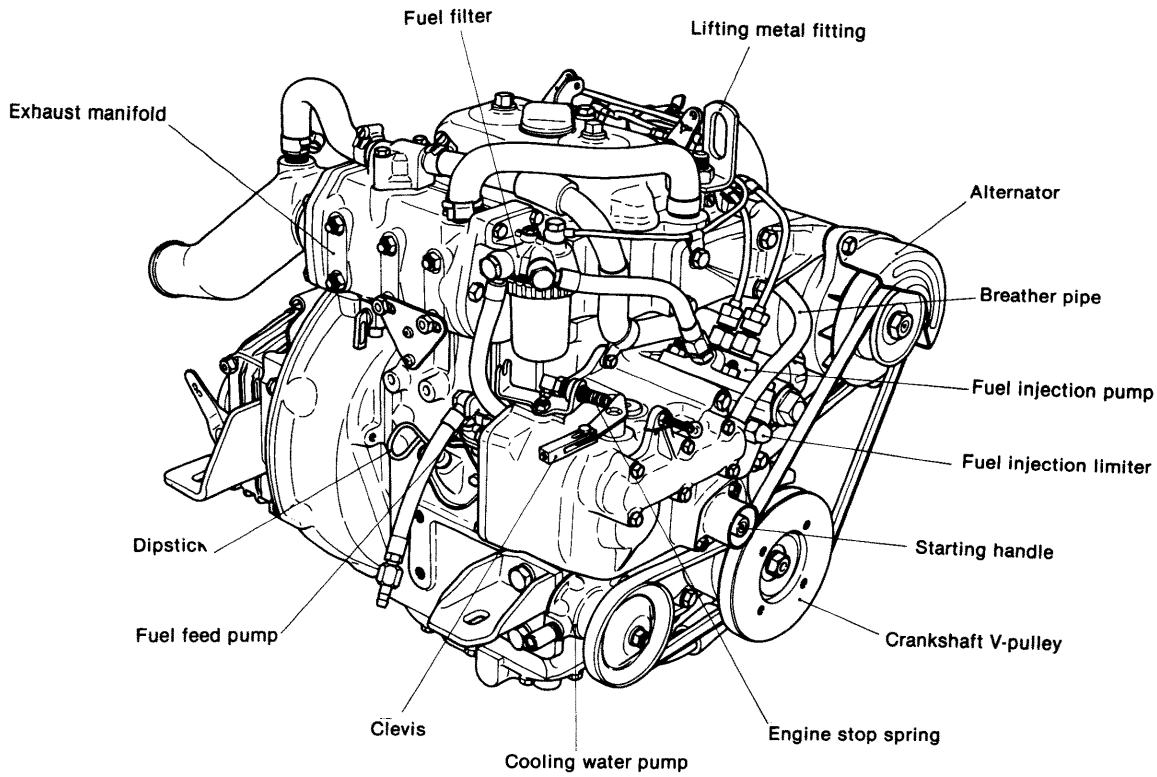

Printed in Japan
2F015A