YANMAR

A0A1029-0104

SERVICE MANUAL

MARINE DIESEL ENGINE

4JH2E,4JH2-TE,
4JH2-HTE,4JH2-DTE

2001.4

MODELS

4JH2E
4JH2-TE
4JH2-HTE
4JH2-DTE

CHAPTER 1 GENERAL
1. Exterior Views 1-1
2. Specifications 1-4
3. Construction 1-6
4. Performance Curves 1-7
5. Engine Cross Section 1-11
6. Dimensions 1-12
7. Piping Diagrams 1-21

CHAPTER 2 BASIC ENGINE PARTS
1. Cylinder Block 2-1
2. Cylinder Liners 2-4
3. Cylinder Head 2-6
4. Piston and Piston Pins 2-13
5. Connecting Rod 2-17
6. Crankshaft and Main Bearing 2-20
7. Camshaft and Tappets 2-23
8. Timing Gear 2-26
9. Flywheel and Housing 2-28

CHAPTER 3 FUEL INJECTION EQUIPMENT
1. Fuel Injection Pump Service Data 3-1
2. Governor 3-2
3. Disassembly, Reassembly and Inspection of Fuel Injection Pump 3-13
4. Adjustment of Fuel Injection Pump and Governor 3-23
5. Fuel Feed Pump 3-29
6. Fuel Injection Nozzle 3-31
7. Troubleshooting 3-35
8. Tools 3-37
9. Fuel Filter 3-39
10. Fuel Tank (Optional) 3-40

CHAPTER 4 INTAKE AND EXHAUST SYSTEM
1. Intake and Exhaust System 4-1
2. Turbocharger 4-4
3. Mixing Elbow 4-18

CHAPTER 5 LUBRICATION SYSTEM
1. Lubrication System 5-1
2. Lube Oil Pump 5-3
3. Lube Oil Filter 5-6
4. Oil Pressure Control Valve 5-8
5. Lube Oil Cooler 5-9
6. Piston Cooling Nozzle 5-11
7. Rotary Waste Oil Pump (Optional) 5-12

CHAPTER 6 COOLING WATER SYSTEM
1. Cooling Water System 6-1
2. Sea Water Pump 6-4
3. Fresh Water Pump 6-7
4. Heat Excharger 6-10
5. Pressure Cap and Sub Tank 6-12
6. Thermostat 6-14
7. Kingston Cock (Optional) 6-16
8. Sea Water Filter (Optional) 6-17
9. Bilge Pump and Bilge Strainer (Optional) 6-18

CHAPTER 7 REDUCTION AND REVERSING GEAR
Marine gear model KBW 20 and 21
1. Construction 7-1
2. Installation 7-6
3. Operation and Maintenance 7-7
4. Inspection and Servicing 7-8
5. Disassembly 7-13
6. Reassembly 7-17
7. Special Tools 7-23

Marine gear model KM4A, (Angle drive)
1. Construction 7-24
2. Shifting Device 7-28
3. Inspection and Servicing 7-33
4. Special Tools 7-43
5. Disassembly 7-45
6. Reassembly 7-53

Marine gear model KM3P2
1. Construction 7-62
2. Shifting Device 7-68
3. Inspection and Servicing 7-73
4. Disassembly 7-80
5. Reassembly 7-85

CHAPTER 8 REMOTE CONTROL
1. Remote Control System 8-1
2. Remote Control Installation 8-2
3. Remote Control Inspection 8-5
4. Remote Control Adjustment 8-6

CHAPTER 9 ELECTRICAL SYSTEM
1. Electrical System 9-1
2. Battery 9-7
3. Starter Motor 9-10
4. Alternator 9-26
5. Instrument Panel and Wiring Codes 9-36
6. Warning Devices 9-39
7. Air Heater (Optional) 9-42
8. Electric Type Engine Stop Device (Optional) 9-43
9. Tachometer 9-45
10. Alternator 12V/80A (Optional) 9-48


CHAPTER 10 DISASSEMBLY AND REASSEMBLY
1. Disassembly and Reassembly Precautions 10-1
2. Disassembly and Reassembly Tools 10-2
3. Disassembly and Reassembly 10-9
4. Bolt/nut Tightening Torque 10-32
5. Test Running 10-33


Ref. 4JH/4JH2E PARTS DEFERING

Printed in Japan
A0A1029-9002

1. Exterior Views

1-1 4JH2E

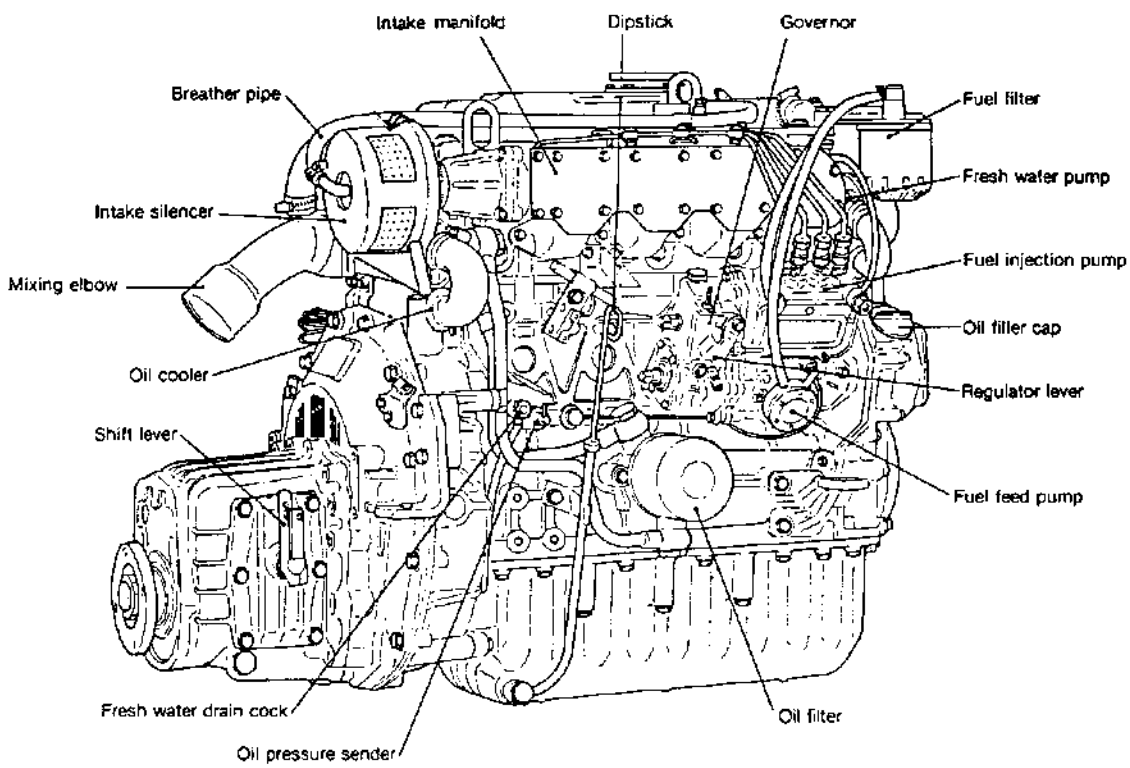

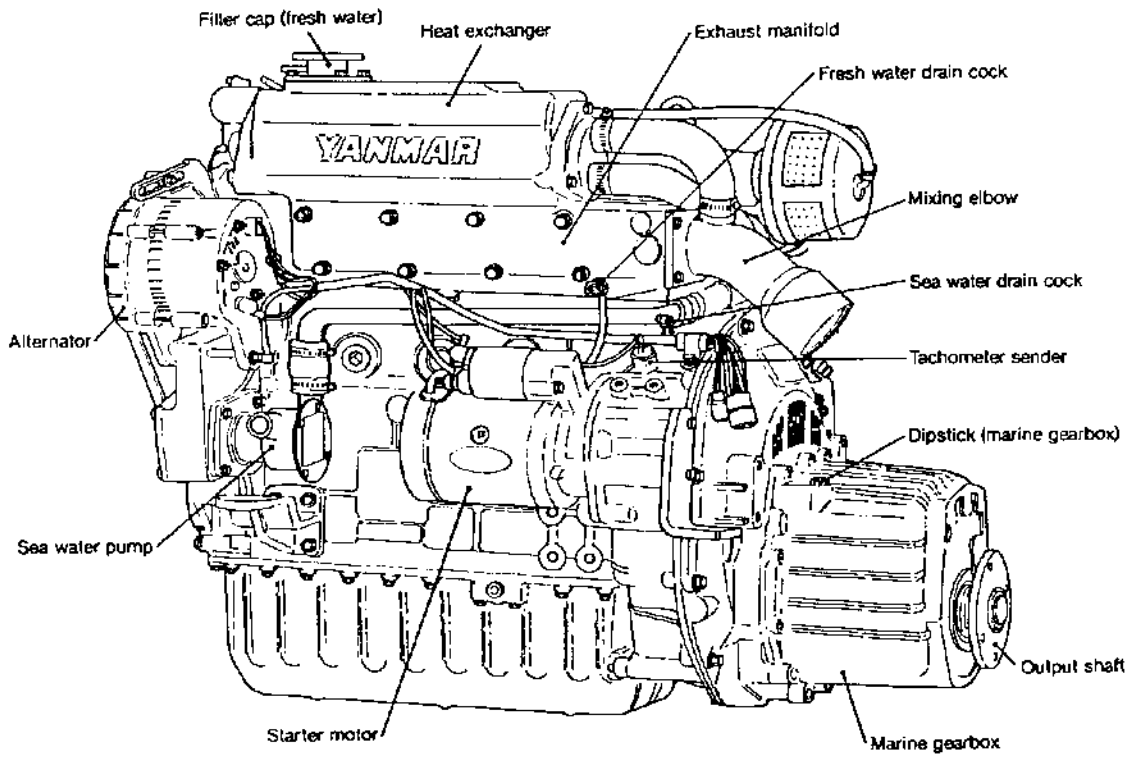

Printed in Japan
A0A1029-9002